


Aufbauanleitung / *assembly instructions* mod. **1351 - 1355 & 1361 - 1365 KID**

Bitte diese Aufbauanleitung
sorgfältig aufbewahren!

*Please keep this assembly
instructions safe!*




8x
M8 x 20
Unterbaupaket



14x
4,5 x 35
Unterbaupaket


1. Montagematerial.

1. *Fitting material.*


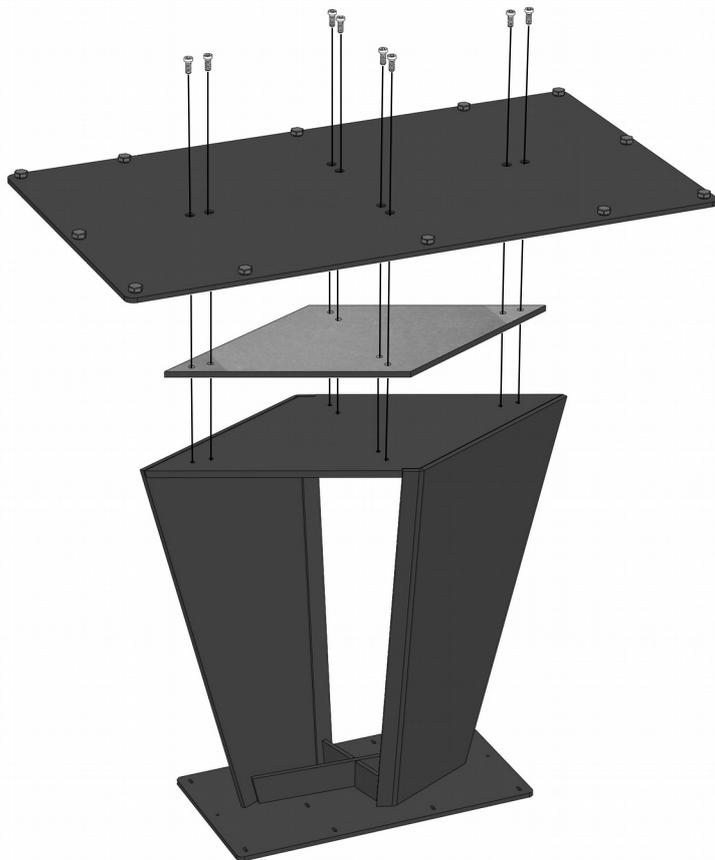


2. Den Unterbau verschrauben.


2. *Screw the tablebase together.*

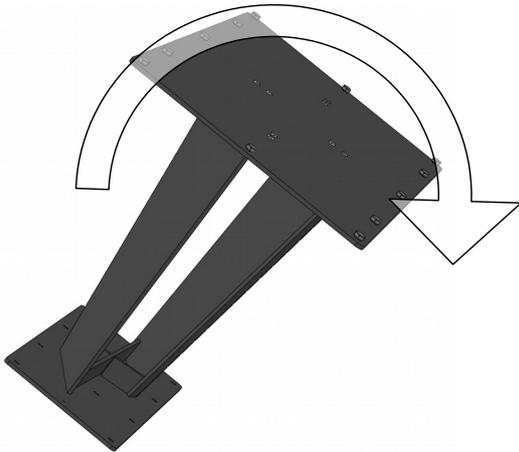

3. Den Unterbau wenden.
3. Turn the tablebase.

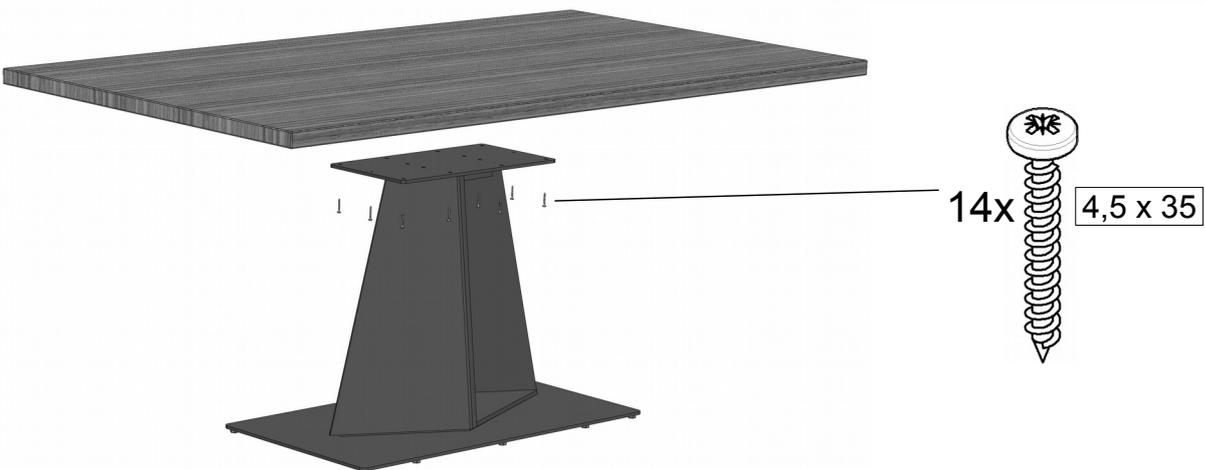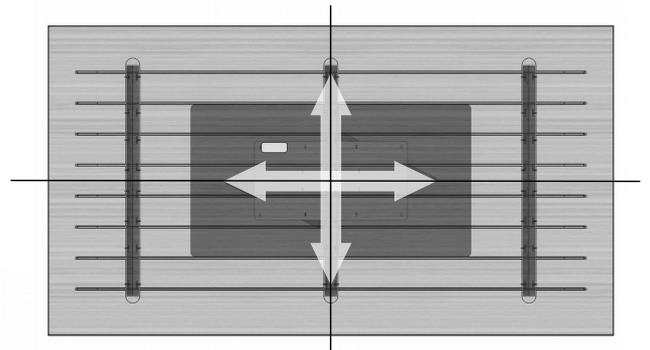

4. Die Platte auf den Unterbau auflegen, mittig ausrichten und dann verschrauben.
4. Place the board onto the base, align it in the middle and then screw it on.

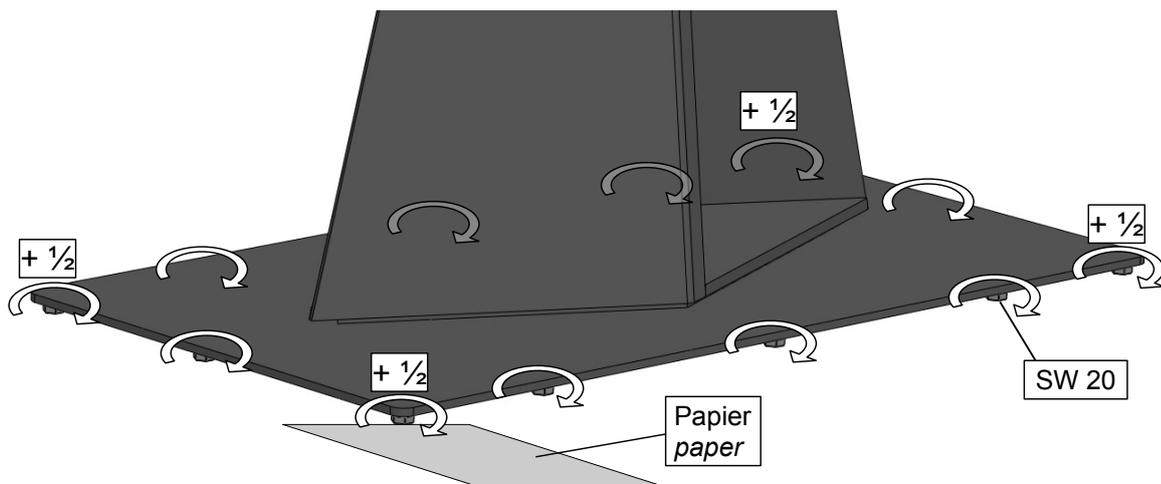

5. Um die Standfestigkeit zu optimieren:

Alle 12 Stellschrauben so weit mit einem Maulschlüssel (SW 20) herausdrehen, dass sie alle Bodenkontakt haben. Mit einem Blatt Papier kontrollieren, ob noch ein Spalt zwischen den Stellschrauben und dem Boden ist.

Nun die 4 äußeren Stellschrauben eine weitere halbe Umdrehung herausdrehen, um so die Bodenplatte unter Spannung setzen.

5. To optimize the stability:

Turn each of the 12 adjusting screws with a wrench (SW 20), so that they will be in contact to the floor. Check with a sheet of paper, if there is still a gap between the adjusting screws and the floor.

Now turn out the 4 outer adjusting screws another half revolution, so that the ground plate will be under tension.



6. Fertig.
6. Ready.